

Care & Maintenance

1. Please store the product in a cool and dry place.
2. Please do not keep the product near the heat or open fire, away from sunlight.
3. Do not use thinner, volatile oil, bleach or other corrosive solvents to wipe the product.
4. Do not wash the product, please use wet cloth to clean.
5. This product is specially designed and manufactured without maintenance, no necessary to add
6. lubricating oil or maintenance regularly.

Product specification

Name: Magic Massage Stick

Model: SL-C501

Rated voltage: 4.8V ===

Rated power: 25W

Rated time: 20 minutes

Safety structure 

WARRANTY CARD

ART. NAME		DEALER(SERVICE CENTER)
MODEL		
CUSTOMER		
ADDRESS		
TEL		
DATE OF PURCHASE		EXPIRY :ONE YEAR FROM DATE OF PURCHASE

if malfunction happens within warranty period (one year) and under the following conditions, this product will be repaired for free:

1. there are broken parts or malfunction when purchasing this machine.
2. damage that occurs when it is being used under the guidance of the operation instructions (but the manufacturer is not responsible for damage resulting from misuse, operation without the guidance of the instructions, or natural disasters
3. the damage of the nonconsumptive parts.


SAVE THESE INSTRUCTIONS

Products refer to the actual product, without prior notice.

iRest®

MAGIC MASSAGE STICK

SL-C501
OPERATION INSTRUCTIONS

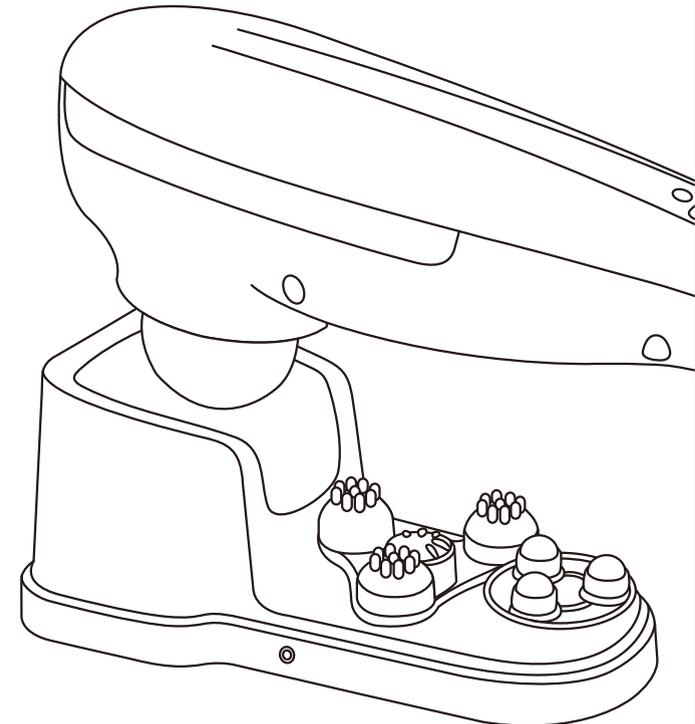

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

1. Safety Warning

- Please use this product according to this Manual
- Please ensure that the mains power is suitable for this product; do not use this product if its casing or mains cable is damaged
- Do not allow any foreign matter to enter the clearance between the massage head and the casing
- Do not allow the product to come into contact with water so as to avoid any possible accidents that may result from a short circuit
- Please disconnect the product from the mains supply after use or before cleaning to avoid damage to the equipment or personal injury
- Do not plug or unplug this product when your hands are wet
- Do not pull the cable when plugging or unplugging, and not available strong force
- Do not damage the cable or change the circuit of the product
- Please cease using this product in case of a power cut in order to avoid anybody injury upon sudden power resumption
- Do not use any spare parts and attachments other than those recommended
- Do not use the appliance in outdoor
- Do not use this product with too much force so as to avoid injury
- Do not use this product within an hour after a meal
- Please stop using this product and consult your local supplier if you notice anything abnormal with the product during use
- Please stop using this product and consult your doctor for advice if you notice anything abnormal with the product during use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

2. Working Environment

- Do not use this product in a highly humid environment such as a bathroom
- Do not use this product immediately after there has been a sharp change in the environmental temperature
- Do not use this product in an environment where there are lots of dust or corrosive gases

3. People That Should Not Use This Product

- Women that are pregnant or menstruating
- People with contagious skin conditions
- Patients with osteoporosis
- Patients with heart diseases and with electronic medical instruments like a heart pacemaker
- People in a high fever
- Those who are injured or suffering from anybody surface disease
- Children under 14-year old or people mentally unbalanced without being supervised are not allowed to use this machine
- Those who need to rest according to a doctor's advice or those who do not feel well
- Those who are wet
- Those are under the influence of alcohol or feeling unwell
- Please according to your doctor's advice if you have had an operation recently
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.


Troubleshooting

Phenomenon	Possible Cause	Solution
The product does not work	The product has low battery	Recharge the product
Larger noise can be heard from product	Used the product continuously for a long time	Let the product cool down for 30 minutes before you use it again


Charging instructions

1. During charging the product, the indicator light of adaptor is red, and it will be green when charging is completed.
2. The product cannot operate while charging. It can only operate again when the charging adaptor is disconnected.
3. When the product has no electricity, need charging in time. Avoid battery damage.
4. To avoid battery aging, charge the product every two months if the product is not going to be used for a long period of time.

Structure description

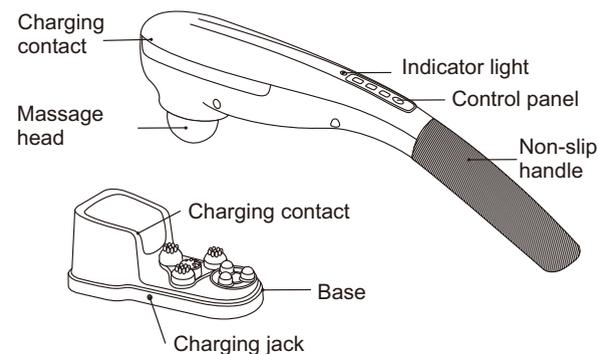

Instructions

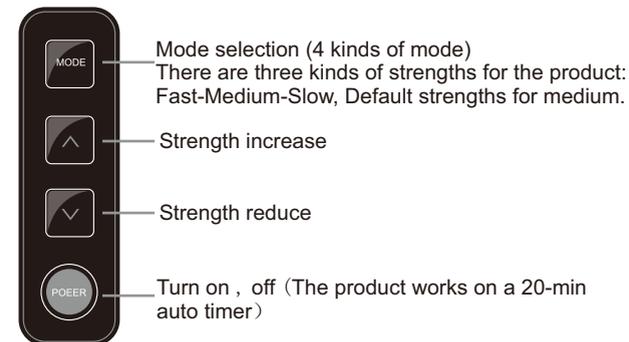

Product use diagram

